

**Coaxial Interseries Adapter Selection Matrix**

Use this handy chart to locate the desired interseries adapter. Simply locate the connector type and gender in the top row and repeat in the left hand column. Intersect the row and column to determine availability. Adapters shown in this matrix are listed on this and the opposite page. If a specific adapter type is not listed, please visit our website at [www.L-com.com](http://www.L-com.com) for the latest information or call our technical support group at **800-343-1455** for assistance. Adapters listed are generally intended for use in the RF band.

**Reversed Polarity Types**

INTERFACE SERIES	RP-BNC	RP-TNC PLUG	RP-TNC JACK	RP-SMA PLUG	RP-SMA JACK
N FEMALE	AXA-NFRBP	AXA-NFRTP, AXA-NFRTP2		AXA-NFRSP	AXA-NFRSJ
N MALE		AXA-NMRTF	AXA-NMRTJ	AXA-NMRSP	AXA-NMRSJ
RP-TNC				AXA-RTJRSJ	AXA-RTPRSJ

INTERFACE SERIES	BNC FEMALE	BNC MALE	F FEMALE	F MALE	TNC MALE	TNC FEMALE	MINI UHF F	MINI UHF M	N MALE	SMA F	SMA M	UHF F	UHF M	MMCX F	NMO
BNC FEMALE			BA220	BA120, BA037	BA3001	BA70		BA883	BN109	BA588	BA29	BA230	BA50		
BNC MALE			BA125, BA017			BA71, BA3002(RA)	BA882		BN107	BA38	BA28	BA60	BA270		
F FEMALE	BA220	BA125, BA017				BA127			AXA-NMFF			BA301	BA160		
F MALE	BA120, BA037				BA121							BA130			
FME MALE	BA8016	BA8005, BA8006(RA)													
MINI UHF FEMALE		BA882			BA881					BA592	BA582		BA884		
MINI UHF MALE	BA883					BA886				BA591	BA581	BA885			
N FEMALE	BN110	BN115			AXA-NFTM			AXA-NFMUM		BA584	BA25				AXA-AMNFB
N MALE	BN109	BN107	AXA-NMFF			AXA-NMTF				BA34	AXA-NMSM				
RCA FEMALE	BA94	BA95, BA018	BA887										BA40		
RCA MALE	BA90		BA907									BA140			
SMA FEMALE	BA588	BA38			BA589	BA590	BA592	BA591	BA34				BA36	BA3000	
SMA MALE	BA29	BA28			BA579	BA580	BA582	BA581	AXA-NMSM			BA586	BA26		
TNC FEMALE	BA70	BA71, BA3002(RA)	BA127					BA886	AXA-NMTF	BA590	BA580	BA27	BA26		
TNC MALE	BA3001			BA121			BA881			BA589	BA579				
UHF FEMALE	BA230	BA60	BA301	BA130				BA885		BA586	BA27				
UHF MALE	BA50	BA270	BA160				BA884			BA36	BA26				
1.6/5.6 MALE	BA9201	BA9200													



Item #	Description	1-9	10-24	25-99	100-249	250-499
<b>✓RoHS</b>	<b>BNC Interseries Coaxial Adapters - 50 Ohm</b>					
<a href="#">BA28</a>	Coaxial Adapter, BNC Male / SMA Male	5.75	5.40	5.06	4.72	4.37
<a href="#">BA38</a>	Coaxial Adapter, BNC Male / SMA Female	5.75	5.40	5.06	4.72	4.37
<a href="#">BA60</a>	Coaxial Adapter, BNC Male / UHF Female	3.95	3.71	3.48	3.24	3.00
<a href="#">BA71</a>	Coaxial Adapter, BNC Male / TNC Female	4.50	4.23	3.96	3.69	3.42
<a href="#">BA3002</a>	Coaxial Adapter, BNC Male / TNC Female, Right Angle	6.55	6.16	5.76	5.37	4.98
<a href="#">BA29</a>	Coaxial Adapter, BNC Female / SMA Male	5.75	5.40	5.06	4.72	4.37
<a href="#">BA50</a>	Coaxial Adapter, BNC Female / UHF Male	3.95	3.71	3.48	3.24	3.00
<a href="#">BA70</a>	Coaxial Adapter, BNC Female / TNC Female	4.50	4.23	3.96	3.69	3.42
<a href="#">BA3001</a>	Coaxial Adapter, BNC Female / TNC Male	4.00	3.76	3.52	3.28	3.04
<b>✓RoHS</b>	<b>BNC Interseries Coaxial Adapters - 75 Ohm</b>					
<a href="#">BA017</a>	Coaxial Adapter, BNC Male / Type F Female	3.95	3.71	3.48	3.24	3.00
<a href="#">BA018</a>	Coaxial Adapter, BNC Male / RCA Female	2.95	2.77	2.60	2.42	2.24
<a href="#">BA037</a>	Coaxial Adapter, BNC Female / Type F Male	3.95	3.71	3.48	3.24	3.00
<b>✓RoHS</b>	<b>SMA Interseries Coaxial Adapters - 50 Ohm</b>					
<a href="#">AXA-NMSM</a>	Coaxial Adapter, SMA Male / Type N Male	3.99	3.83	3.67	3.39	2.99
<a href="#">BA25</a>	Coaxial Adapter, SMA Male / Type N Female	5.75	5.40	5.06	4.72	4.37
<a href="#">BA26</a>	Coaxial Adapter, SMA Male / UHF Male	5.75	5.40	5.06	4.72	4.37
<a href="#">BA27</a>	Coaxial Adapter, SMA Male / UHF Female	5.75	5.40	5.06	4.72	4.37
<a href="#">BA579</a>	Coaxial Adapter, SMA Male / TNC Male	5.75	5.40	5.06	4.72	4.37
<a href="#">BA580</a>	Coaxial Adapter, SMA Male / TNC Female	5.75	5.40	5.06	4.72	4.37
<a href="#">BA581</a>	Coaxial Adapter, SMA Male / Mini UHF Male	5.75	5.40	5.06	4.72	4.37
<a href="#">BA582</a>	Coaxial Adapter, SMA Male / Mini UHF Female	5.75	5.40	5.06	4.72	4.37
<a href="#">BA34</a>	Coaxial Adapter, SMA Female / Type N Male	5.75	5.40	5.06	4.72	4.37
<a href="#">BA584</a>	Coaxial Adapter, SMA Female / Type N Female	5.75	5.40	5.06	4.72	4.37
<a href="#">BA36</a>	Coaxial Adapter, SMA Female / UHF Male	5.75	5.40	5.06	4.72	4.37
<a href="#">BA586</a>	Coaxial Adapter, SMA Female / UHF Female	5.75	5.40	5.06	4.72	4.37
<a href="#">BA588</a>	Coaxial Adapter, SMA Female / BNC Female	5.75	5.40	5.06	4.72	4.37
<a href="#">BA589</a>	Coaxial Adapter, SMA Female / TNC Male	5.75	5.40	5.06	4.72	4.37
<a href="#">BA590</a>	Coaxial Adapter, SMA Female / TNC Female	5.75	5.40	5.06	4.72	4.37
<a href="#">BA591</a>	Coaxial Adapter, SMA Female / Mini UHF Male	5.75	5.40	5.06	4.72	4.37
<a href="#">BA592</a>	Coaxial Adapter, SMA Female / Mini UHF Female	5.75	5.40	5.06	4.72	4.37
<a href="#">BA3000</a>	Coaxial Adapter, SMA Female / MMCX Female	8.00	7.52	7.04	6.56	6.08

