

Item #	Description	1-9	10-24	25-99	100-249	250-499
<b>✓RoHS FME to BNC Interseries Coaxial Adapters - 50 and 75 Ohm - Useful in Cellular Applications</b>						
Many cellular communication devices utilize the FME connector on coaxial antenna lines. L-com offers a selection of highest quality components utilizing machined brass with nickel plated surfaces and gold plated pins.						
<a href="#">BA8016</a>	Coaxial Adapter, FME Male / BNC Female, 50 Ohm	4.95	4.65	4.36	4.06	3.76
<a href="#">BA8005</a>	Coaxial Adapter, FME Male / BNC Male, 75 Ohm	3.95	3.71	3.48	3.24	3.00
<a href="#">BA8006</a>	Coaxial Adapter, FME Male / 90° BNC Male, 75 Ohm	4.95	4.65	4.36	4.06	3.76
<b>✓RoHS 1.6/5.6 to BNC Interseries Coaxial Adapters - 50 Ohm - For Conversion to the European Standard</b>						
These machined adapters are great for converting standard BNC terminations to 1.6/5.6 terminations which are common in other areas of the world.						
<a href="#">BA9200</a>	Coaxial Adapter, BNC Male / 1.6/5.6 Female Adapter	7.95	7.47	7.00	6.52	6.04
<a href="#">BA9201</a>	Coaxial Adapter, BNC Female / 1.6/5.6 Male Adapter	7.95	7.47	7.00	6.52	6.04
<b>✓RoHS Type F Interseries Coaxial Adapters - 50 Ohm</b>						
<a href="#">BA120</a>	Coaxial Adapter, Type F Male / BNC Female	1.95	1.83	1.72	1.60	1.48
<a href="#">BA121</a>	Coaxial Adapter, Type F Male / TNC Male	1.95	1.83	1.72	1.60	1.48
<a href="#">BA125</a>	Coaxial Adapter, Type F Female / BNC Male	1.95	1.83	1.72	1.60	1.48
<a href="#">BA127</a>	Coaxial Adapter, Type F Female / TNC Female	1.95	1.83	1.72	1.60	1.48
<a href="#">BA220</a>	Coaxial Adapter, Type F Female / BNC Female	1.95	1.83	1.72	1.60	1.48
<b>✓RoHS RCA Interseries Coaxial Adapters - 50 and 75 Ohm</b>						
<a href="#">BA90</a>	Coaxial Adapter, RCA Male / BNC Female, 50 Ohm	2.95	2.77	2.60	2.42	2.24
<a href="#">BA94</a>	Coaxial Adapter, RCA Female / BNC Female, 50 Ohm	2.95	2.77	2.60	2.42	2.24
<a href="#">BA95</a>	Coaxial Adapter, RCA Female / BNC Male, 50 Ohm	2.95	2.77	2.60	2.42	2.24
<a href="#">BA887</a>	Coaxial Adapter, RCA Male / Type F Female, 50 Ohm	1.95	1.83	1.72	1.60	1.48
<a href="#">BA907</a>	Coaxial Adapter, RCA Male / Type F Female, 75 Ohm	1.95	1.83	1.72	1.60	1.48
<b>✓RoHS Type N Interseries Coaxial Adapters - 50 Ohm</b>						
<a href="#">BN107</a>	Coaxial Adapter, Type N Male / BNC Male	5.75	5.40	5.06	4.72	4.37
<a href="#">BN109</a>	Coaxial Adapter, Type N Male / BNC Female	5.75	5.40	5.06	4.72	4.37
<a href="#">AXA-NMSM</a>	Coaxial Adapter, Type N Male / SMA Male	3.99	3.83	3.67	3.39	2.99
<a href="#">AXA-NMTE</a>	Coaxial Adapter, Type N Male / TNC Female	3.99	3.83	3.67	3.39	2.99
<a href="#">AXA-NMFE</a>	Coaxial Adapter, Type N Male / Type F Female	3.49	3.35	3.21	2.97	2.62
<a href="#">AXA-NMRSJ</a>	Coaxial Adapter, Type N Male / RP-SMA Jack	4.99	4.79	4.59	4.24	3.74
<a href="#">AXA-NMRTJ</a>	Coaxial Adapter, Type N Male / RP-SMA Plug	4.99	4.79	4.59	4.24	3.74
<a href="#">AXA-NMRTJ</a>	Coaxial Adapter, Type N Male / RP-TNC Jack	4.99	4.79	4.59	4.24	3.74
<a href="#">AXA-NMTRTP</a>	Coaxial Adapter, Type N Male / RP-TNC Plug	4.99	4.79	4.59	4.24	3.74
<a href="#">BN110</a>	Coaxial Adapter, Type N Female / BNC Female	5.75	5.40	5.06	4.72	4.37
<a href="#">BN115</a>	Coaxial Adapter, Type N Female / BNC Male	5.75	5.40	5.06	4.72	4.37
<a href="#">AXA-AMNFB</a>	Coaxial Adapter, Type N Female Bulkhead / NMO	12.99	12.47	11.95	11.04	9.74
<a href="#">AXA-NMFE</a>	Coaxial Adapter, Type N Female / Mini-UHF Male	3.49	3.35	3.21	2.97	2.62
<a href="#">AXA-NFTM</a>	Coaxial Adapter, Type N Female / TNC Male	3.49	3.35	3.21	2.97	2.62
<a href="#">AXA-NFRBP</a>	Coaxial Adapter, Type N Female / RP BNC Plug	3.49	3.35	3.21	2.97	2.62
<a href="#">AXA-NFRSJ</a>	Coaxial Adapter, Type N Female / RP-SMA Jack	4.99	4.79	4.59	4.24	3.74
<a href="#">AXA-NFRSP</a>	Coaxial Adapter, Type N Female / RP-SMA Plug	3.99	3.83	3.67	3.39	2.99
<a href="#">AXA-NFRTP</a>	Coaxial Adapter, Type N Female / RP-TNC Plug	4.99	4.79	4.59	4.24	3.74
<a href="#">AXA-NFRTP2</a>	Coaxial Adapter, Type N Female / RP-TNC Plug 1 Piece Design	4.99	4.79	4.59	4.24	3.74
<b>✓RoHS Mini-UHF Interseries Coaxial Adapters - 50 Ohm</b>						
<a href="#">BA881</a>	Coaxial Adapter, Mini-UHF Female / TNC Male	5.75	5.40	5.06	4.72	4.37
<a href="#">BA882</a>	Coaxial Adapter, Mini-UHF Female / BNC Male	5.75	5.40	5.06	4.72	4.37
<a href="#">BA883</a>	Coaxial Adapter, Mini-UHF Male / BNC Female	5.75	5.40	5.06	4.72	4.37
<a href="#">BA884</a>	Coaxial Adapter, Mini-UHF Female / UHF Male	5.75	5.40	5.06	4.72	4.37
<a href="#">BA885</a>	Coaxial Adapter, Mini-UHF Male / UHF Female	5.75	5.40	5.06	4.72	4.37
<a href="#">BA886</a>	Coaxial Adapter, Mini-UHF Male / TNC Female	5.75	5.40	5.06	4.72	4.37
<b>✓RoHS UHF Interseries Coaxial Adapters - 50 Ohm</b>						
<a href="#">BA40</a>	Coaxial Adapter, UHF Male / RCA Female	2.95	2.77	2.60	2.42	2.24
<a href="#">BA130</a>	Coaxial Adapter, UHF Female / Type F Male	2.95	2.77	2.60	2.42	2.24
<a href="#">BA140</a>	Coaxial Adapter, UHF Female / RCA Male	2.95	2.77	2.60	2.42	2.24
<a href="#">BA160</a>	Coaxial Adapter, UHF Male / Type F Female	2.95	2.77	2.60	2.42	2.24
<a href="#">BA230</a>	Coaxial Adapter, UHF Female / BNC Female	3.95	3.71	3.48	3.24	3.00
<a href="#">BA270</a>	Coaxial Adapter, UHF Male / BNC Male	2.95	2.77	2.60	2.42	2.24
<a href="#">BA301</a>	Coaxial Adapter, UHF Female / Type F Female	2.95	2.77	2.60	2.42	2.24
<b>✓RoHS TNC Interseries Coaxial Adapters - 50 Ohm</b>						
<a href="#">AXA-RTJRSP</a>	Coaxial Adapter, RP-TNC Jack / RP-SMA Plug	3.99	3.83	3.67	3.39	2.99
<a href="#">AXA-RTPRSJ</a>	Coaxial Adapter, RP-TNC Plug / RP-SMA Jack	3.99	3.83	3.67	3.39	2.99



**Free access to over 3,000 CAD models**  
 Download CAD models and 2D drawings for integrating into your projects. [L-com.com/CadDemo](http://L-com.com/CadDemo)