

IDPAL™

**LABELING
TOOL**

www.bradyidpal.com




Instructions

PRODUCT REGISTRATION

Register your ID Pal on-line at www.bradyidpal.com to receive a free gift and view product information.

POWER

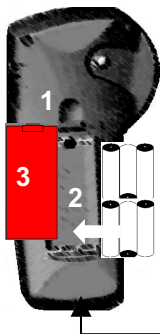

Batteries


1. Open battery compartment.
2. Insert six AA alkaline batteries.
3. Close battery compartment.

-or-

A/C Power

Plug in *optional* A/C Power Supply.

DISPLAY

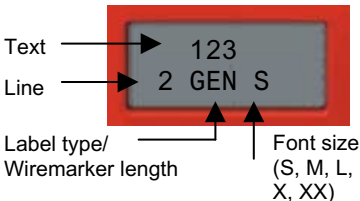

CREATE LABELS

1. Press



2. *Press



General, Banner,
or Wire/Length
(0.75", 1.0", 1.2",
1.5", 2.0", 2.5", 3.0",
4.0", 5.0", 6.0")

*Use multiple presses to scroll through selections. FUNCTION + key scrolls backwards.



3. *Press



7 pt (S) 10 pt (M), 14 pt (L),
20 pt (X), 28 pt (XX)

4. Enter Text

Max. Printable Lines=

General & Wire: 4 Lines

Banner: 2 Lines

5. Press




Locking Lever must be locked to print. See *Change Label Cartridge.*

6. Cut Label—slide cut lever up

SERIALIZATION

1. Use arrows ◀ ▶ to place cursor under serial character.
2. Press **SERIAL** for each consecutive serialization.

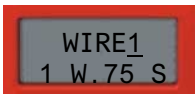

To produce multiple copies of the same legend, press **PRINT** before **SERIAL** .

CHANGE LABEL CARTRIDGE



1. Unlock Lever
2. Push Release Button (on back)
3. Remove Old Cartridge
4. Insert New Cartridge
5. Lock Lever




KEYPAD

FUNCTION	PRESS
Uppercase	FUNCTION + ▲
Lowercase	FUNCTION + ▼
New Line	ENTER
Space	SPACE
Font Size	FONT SIZE
Delete Character	CLEAR DELETE
Clear Legend	FUNCTION + CLEAR DELETE
Feed	FUNCTION + 1 FEED

SYMBOLS

Press **FUNCTION** + Character

CHAR	SYMB	CHAR	SYMB	CHAR	SYMB
A	!	K	'	U	~
B	@	L	.	V	²
C	#	M	"	W	φ
D	\$	N	/	X	≡
E	%	O	\	4	{
F	&	P	°	5	ƒ
G	*	Q	—	6	∅
H	(R	±	7	-
I)	S	'	8	+
J	:	T	Ω	9	=

Prints as 



!"#\$%&'
(\$)&&%*"+ .- / .0 # 1