

**! TIP:** *What is the difference between a WITHIN SERIES Coaxial Adaptor and a BETWEEN SERIES Coaxial Adaptor?*

**Within Series Coaxial Adaptor (Female to Female)**




BNC Male  
(CC59A-05)

BNC Female  
(BA80)

BNC Male  
(CC59A-05)

A **WITHIN SERIES** coaxial adaptor connects between two interfaces of the same series (i.e. SMA to SMA) in female to female, male to female or male to male configurations.

**Between Series Coaxial Adaptor (Female to Female)**

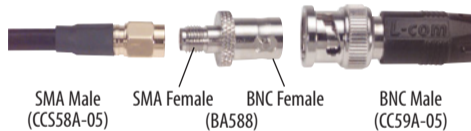

SMA Male  
(CCS58A-05)

SMA Female  
(BA588)

BNC Female  
(BA588)

BNC Male  
(CC59A-05)

A **BETWEEN SERIES** coaxial adaptor connects between two interfaces of different series (i.e. SMA to BNC) in female to female, male to female or male to male configurations.