



STP Keystone Jack Installation Instruction

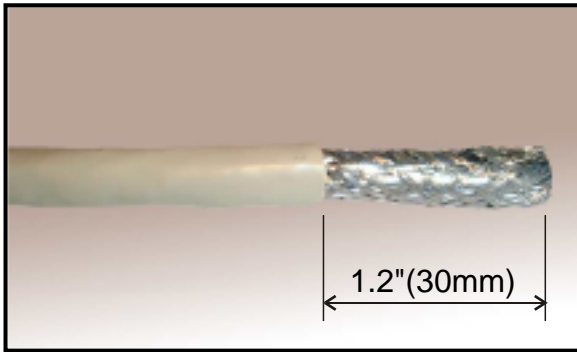

1. Strip the outer plastic jacket with appropriate length about 1.2 inches (30mm)



5. Cut each single wire's aluminum foil off subject to terminated IDC position length.

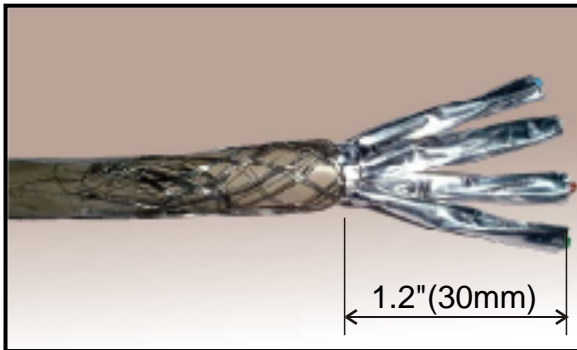


2. Bend back the copper braid over sheath.




6. Arrange the wires according to the color and use punch down tool terminate each pair.)




3. Pierce bayonet between braid and aluminum foil all the way down and hit the shoulder. Place the cable tie-holder over the braid as photo illustrates.

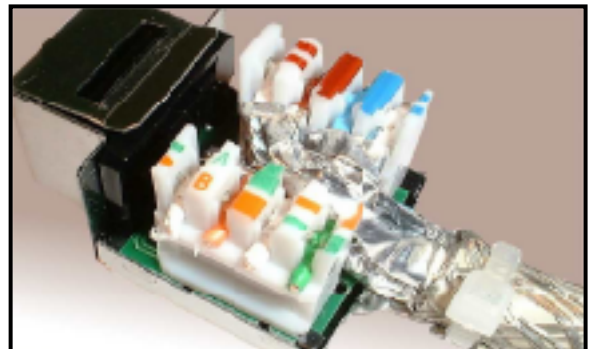

7. After termination completed, make sure the aluminum foil fully covers the wires all the way down to the punch block.

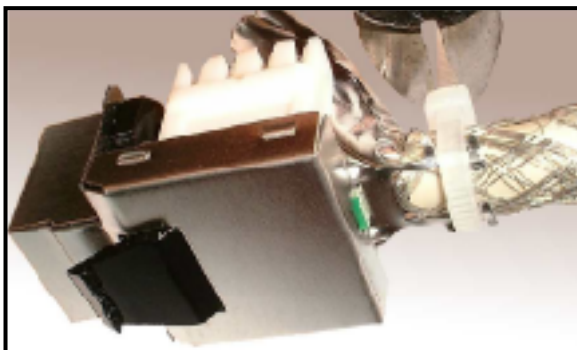

4. Place cable tie at assigned place. Squeeze the cable tie and cut the cable tie tail.

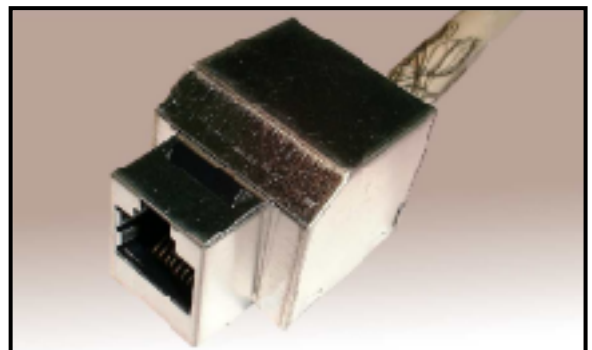

8. Complete view.