





## *How to perform a field installation of a DGBH15FT HD15 (SVGA) jack*

**STEP 1**

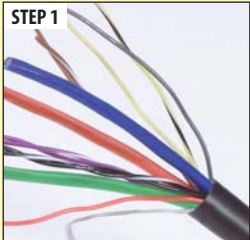

Prepare bulk cable by exposing coax and conductor lines as shown.

**STEP 2**

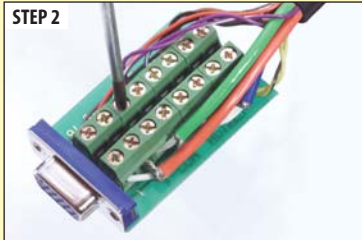

Insert coax center conductor and shield as well as conductors into appropriate terminal slot as indicated in the supplied wiring diagram. Tighten the setscrews.

**STEP 3**



Attach the completed assembly to the mounting surface.