




Easily attach a field installable plug



STEP 1:
Slide compression nut, coupling and plug housing onto cable.

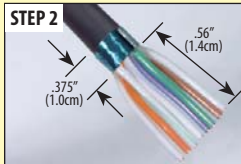

STEP 2:
Strip and prepare conductors for crimping. Trim to .56" (1.4cm).



STEP 3:
Install plug and crimp.



STEP 4:
Slide crimped connector into place and tighten compression nut.