





## How to wire the UJC5E series enhanced Category 5 jack

STEP 1

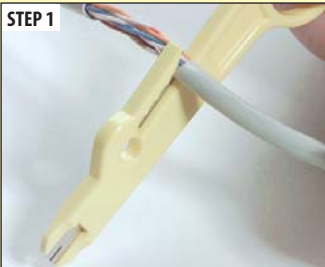


Remove approximately 2" of the outer jacket from the cable. Take care not to nick the wires.

STEP 2

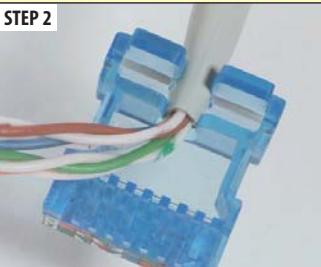


Secure the cable jacket to the strain relief slot in cover.

STEP 3

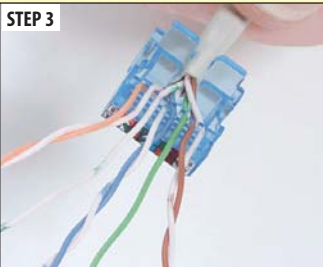


Untwist pairs and insert into color coded slots for either T568A or T568B standard. Take care to maintain the twist to within .5" of IDC contact.

STEP 4

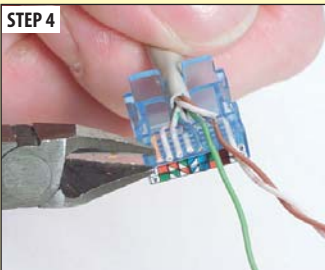


Trim excess wires flush with the cover edge.

STEP 5

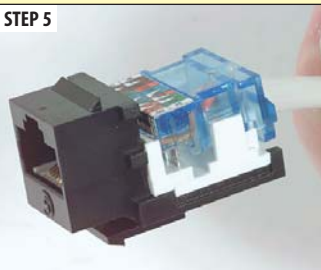

Snap the prepared cover in place.

STEP 6

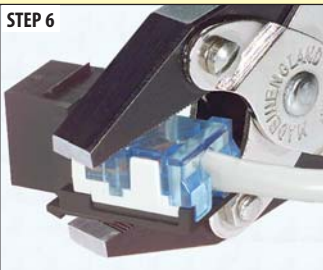

Seat cover with parallel action pliers.